


## Typical connections with external impedance matching (Impedance switch set to BYPASS)

Impedance matching volume controls are connected between the SS-6.2 and the speakers, providing external impedance matching. Impedance matching devices are required for all speakers regardless of ohm rating.

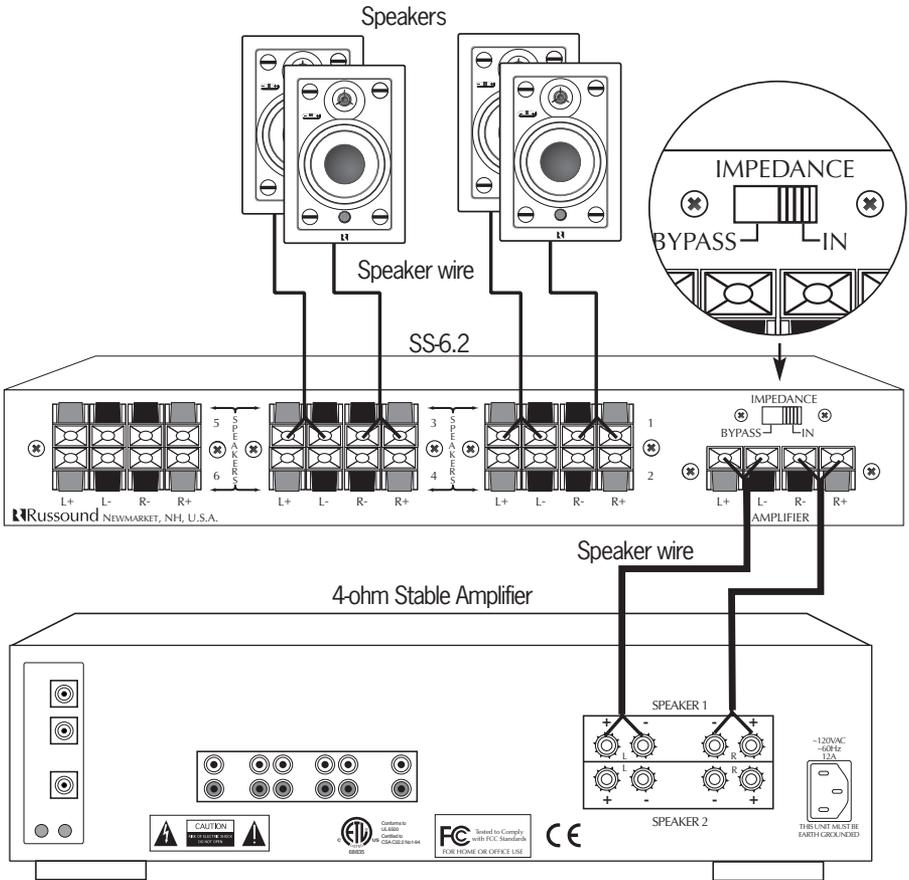

## Typical connections with internal impedance matching (Impedance switch set to IN)

With internal impedance matching (impedance switch set to IN, speakers are connected directly to the SS-6.2 with no need for additional impedance matching volume controls.